



Dear AFCO Customer,

The 5/8" ID bearing has been included as some applications will require a larger bearing installed in the body end. To remove the bearing, remove the "C" clip and carefully tap the bearing out of the body (See Caution). To install the bearing, carefully tap the bearing back into the eyelet (See Caution). (Use of a 3/4 socket may help with this process). Lastly, re-install the "C" clip.

CAUTION: Be sure to tap on the outer race of the bearing only, as damage to bearing can occur if the center ball is hit.



Thank You,
AFCO Racing Products

**BUILDING SPEED, POWER AND
PERFORMANCE FOR OVER 30 YEARS**

800.632.2320

AFCOracing.com



Lit-570 Rev B