



Pressure and Temp. Warning Lights

Power Hook-up - Connect one wire from 12 volt power source to one terminal on light. Mount sender in its respective place and connect second wire between light and sender. All units are self grounding so make sure that pressure senders are mounted to back of gauge, gauge is mounted in metal or connected with braided line. Teflon tape is recommended on all fluid connections. Bulb end of temp senders must be below fluid level, either water or oil.