






# Installation Instructions

Camaro / Firebird Shock Mount • Part Numbers 20146

1. Remove existing shock

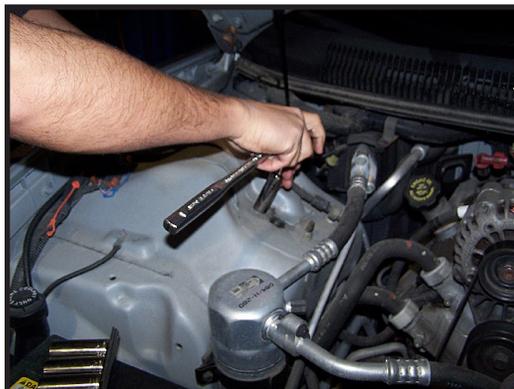

3. Install bracket & 3 washers as shown

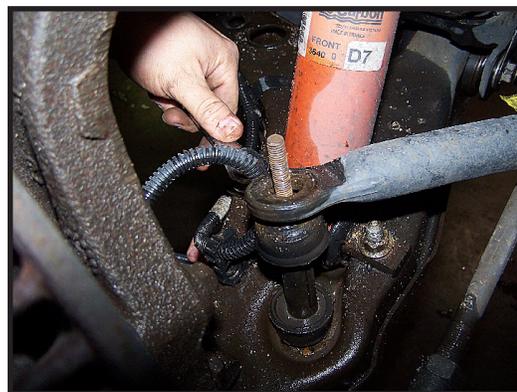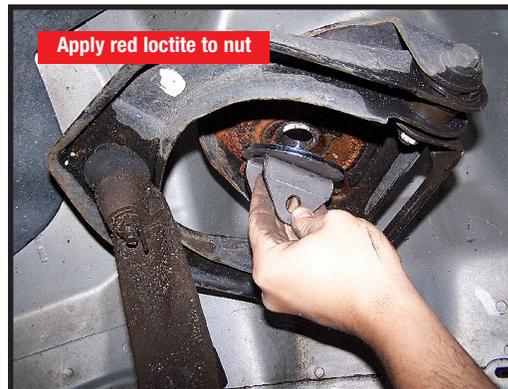

2. Disassemble / remove upper mount from vehicle (discard old bolts / nuts - new hardware is supplied in kit)

5. Bracket must be oriented as shown



6. Install shock & spring & set ride height

